



# Stackback Calculations

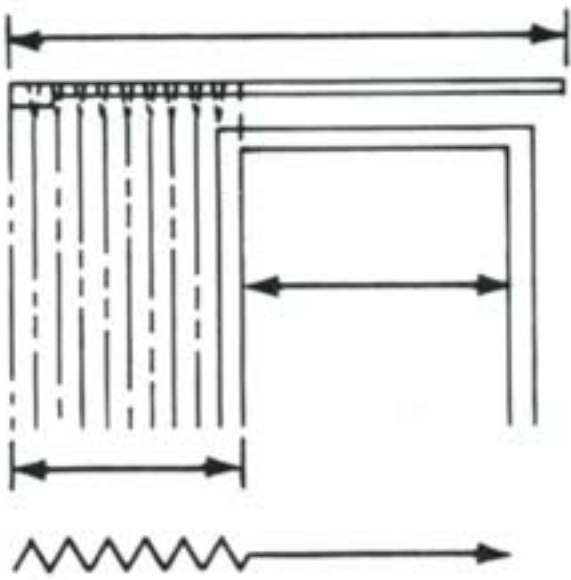

Stackback is the amount of wall space needed if open panels are to clear the glass completely. This dimension, added to the window opening, gives you the proper rod length.

Begin by measuring the window opening, then consult the stackback chart. Find your opening measurement and read across the right rod length.

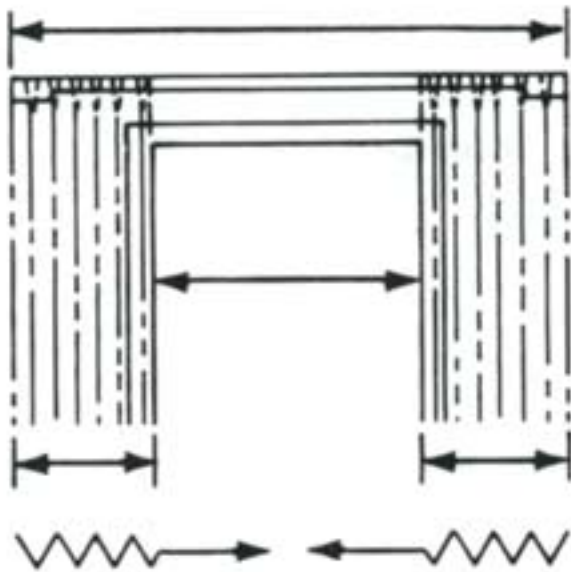

Stackback: Average pleating and mediumweight fabric		
Window opening	Stackback*	Rod length
24"	21"	45"
30"	23"	53"
36"	25"	61"
42"	26"	68"
48"	29"	77"
54"	30"	84"
60"	31"	91"
66"	32"	98"
72"	34"	106"
78"	36"	114"
84"	37"	121"
90"	38"	128"
96"	39"	135"
102"	42"	144"
108"	44"	152"
114"	45"	159"
120"	48"	168"

\*Deduct 7" for one-way draw.