



WOOD POLE INSTALLATION TIPS

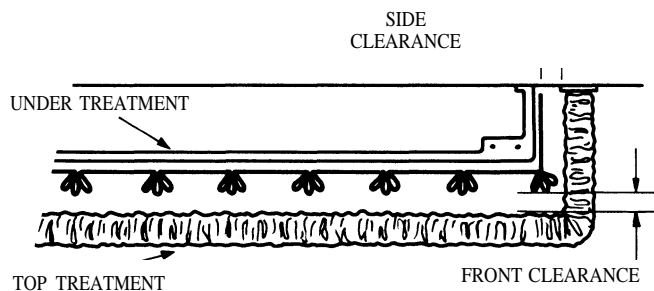


CLEARANCE

When installing over an undertreatment, you must allow for clearance at sides and front for easy operation of undertreatment. NOTE: Elbows may be reversed for longer or shorter front clearance.

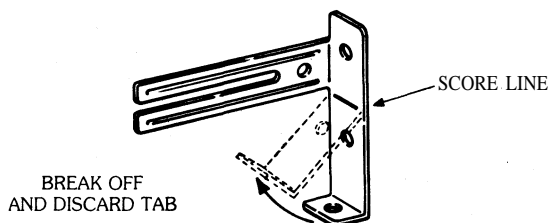


INSTALLING WOOD POLES


1* Use No. 5623 brackets, break off tabs at score line; discard. Mount brackets.

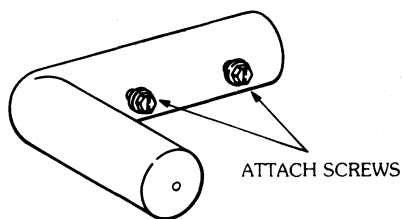


2. Attach screws in wood pole elbows 1" and 2-1/4" from wall end. Screws should be on inside of elbows.

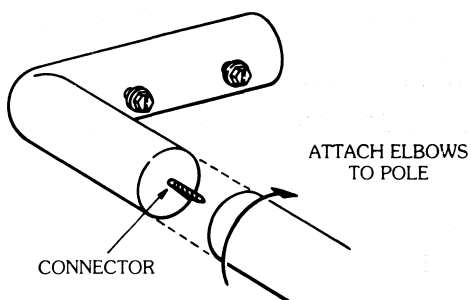

3. Screw elbows to pole section using No. 5610E connectors.

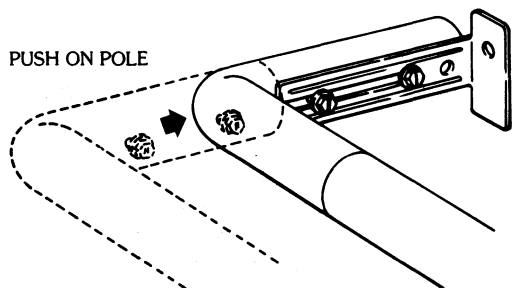

4. Push pole onto brackets making sure screw fits between fingers. Tighten screws.

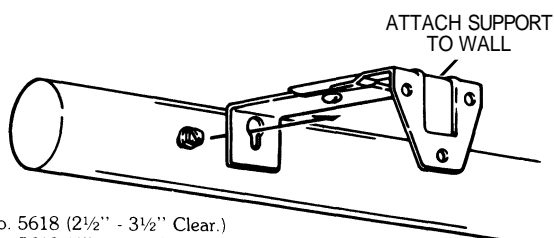

5. Longer valances will require supports. Because necessary clearances vary widely, it is not practical to list all appropriate supports here. Please see the Kirsch Price List for detailed information.

No. 5618 (2 1/2" - 3 1/2" Clear.)
 No. 5619 (4" - 5 1/2" Clear.)
 No. 5620E (6" or 8" Clear.)

* Newer brackets are scored. If bracket is not scored, bend bottom portion up when it interferes with other brackets.